



# White Foil Profile Chart 2800 decorative


## Outer Frame

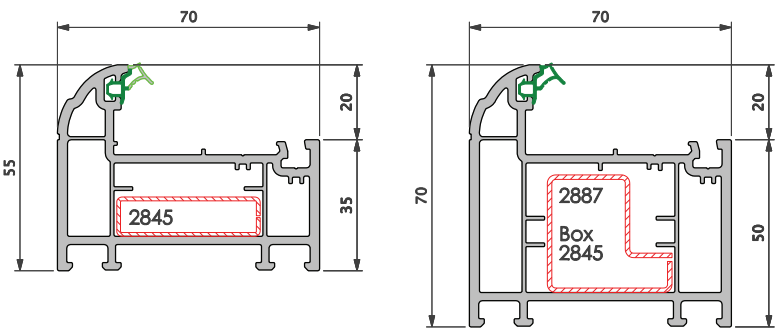

## Transom/Mullion

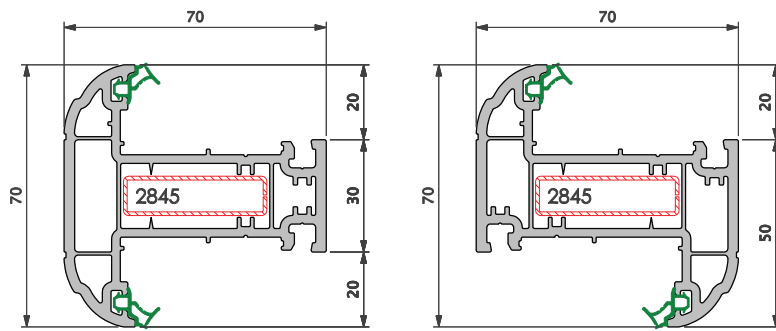

## Casement Sash

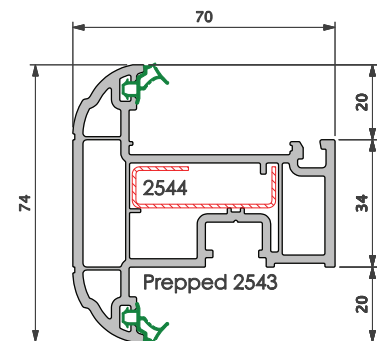

**2832**  
Small 55mm outer frame


**2833**  
Large 70mm outer frame

**2835**  
Small 70mm 'T'


**2836**  
Small 70mm 'Z'

**2825**  
Internally beaded 74mm sash


## Intermediate Sash & Transom/Mullion

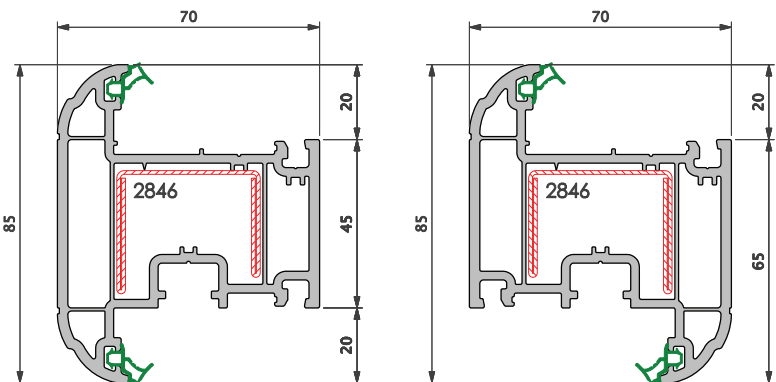

## Door Sash & Transom/Mullion

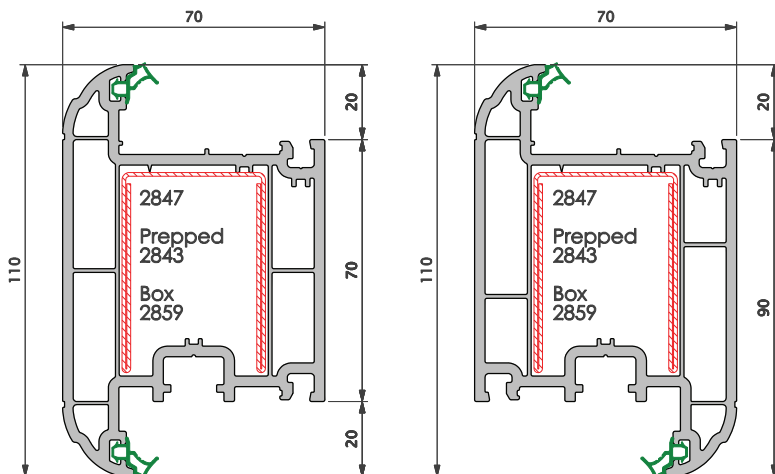

## Ancillary

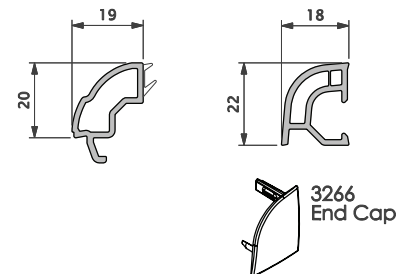

**2829**  
85mm 'T' sash

**2828**  
85mm Tilt & Turn sash


**2831**  
Large 110mm 'T' sash

**2830**  
Large 110mm 'Z' sash


**2840**  
Bead

**3306**  
Weather bar

## Frame Extenders

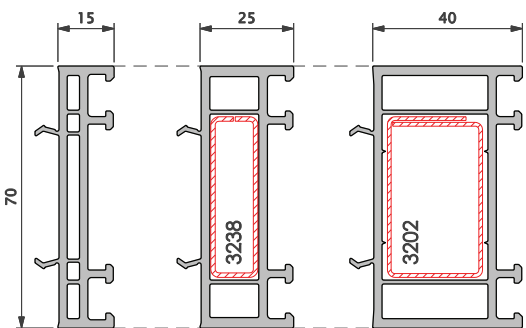


## Frame Couplers

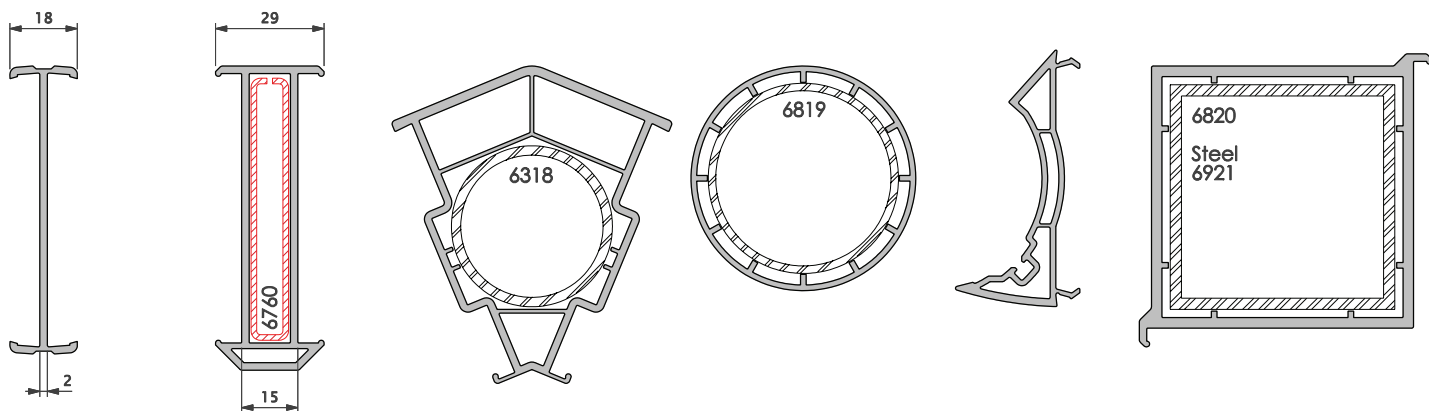

**3336** 15mm Extension  
**3300** 25mm Extension  
**3301** 40mm Extension

**3197** 2mm Frame coupler  
**6960** 15mm Frame coupler  
**3196** 135° Bay post  
**6916** 60mm Bay pole  
**3311** Adaptor for 6916  
**6920** 90° Bay post

## Cill

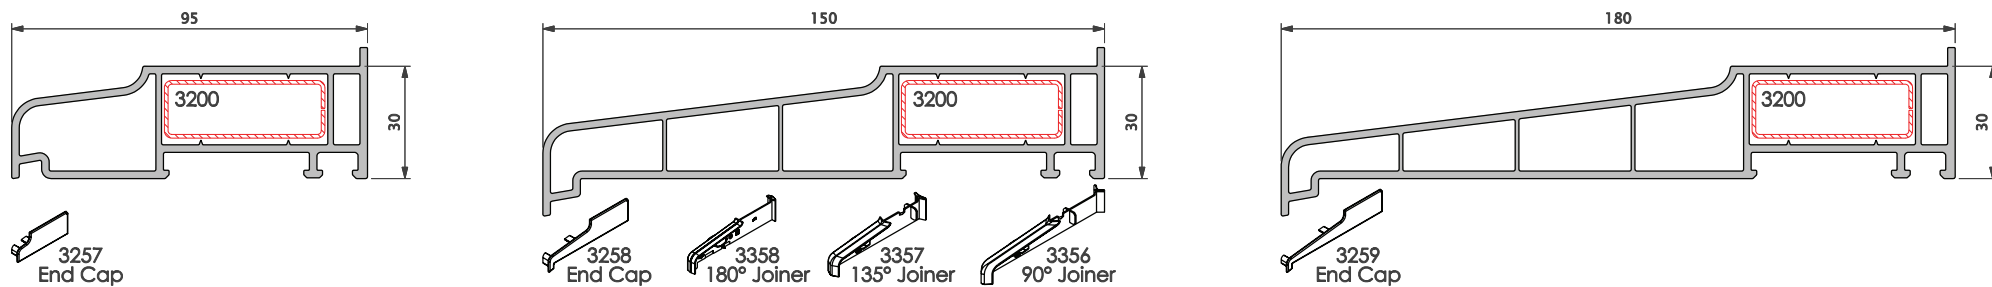


**3337**  
95mm Cill


**3338**  
150mm Cill

**3339**  
180mm Cill

## Belface

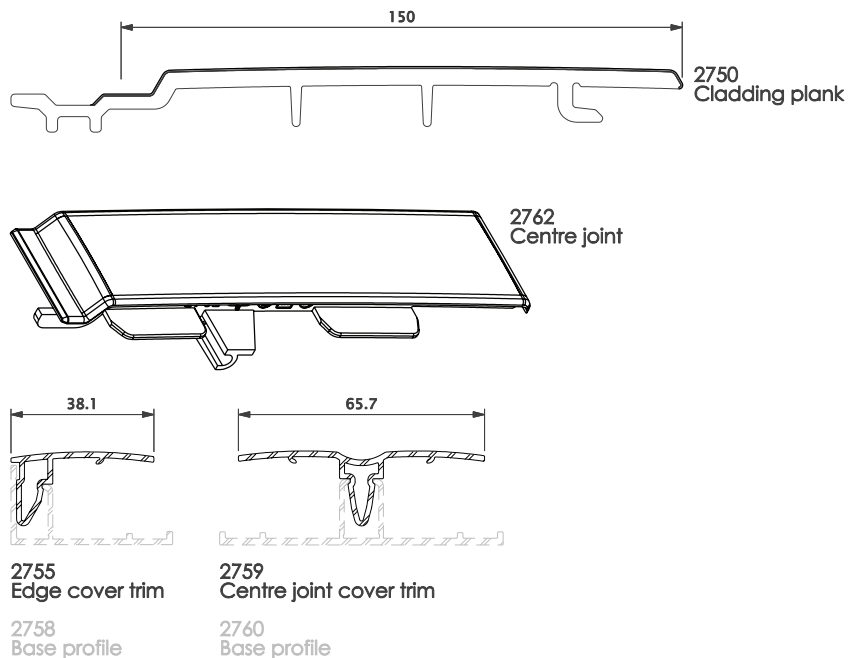

## DeepLas

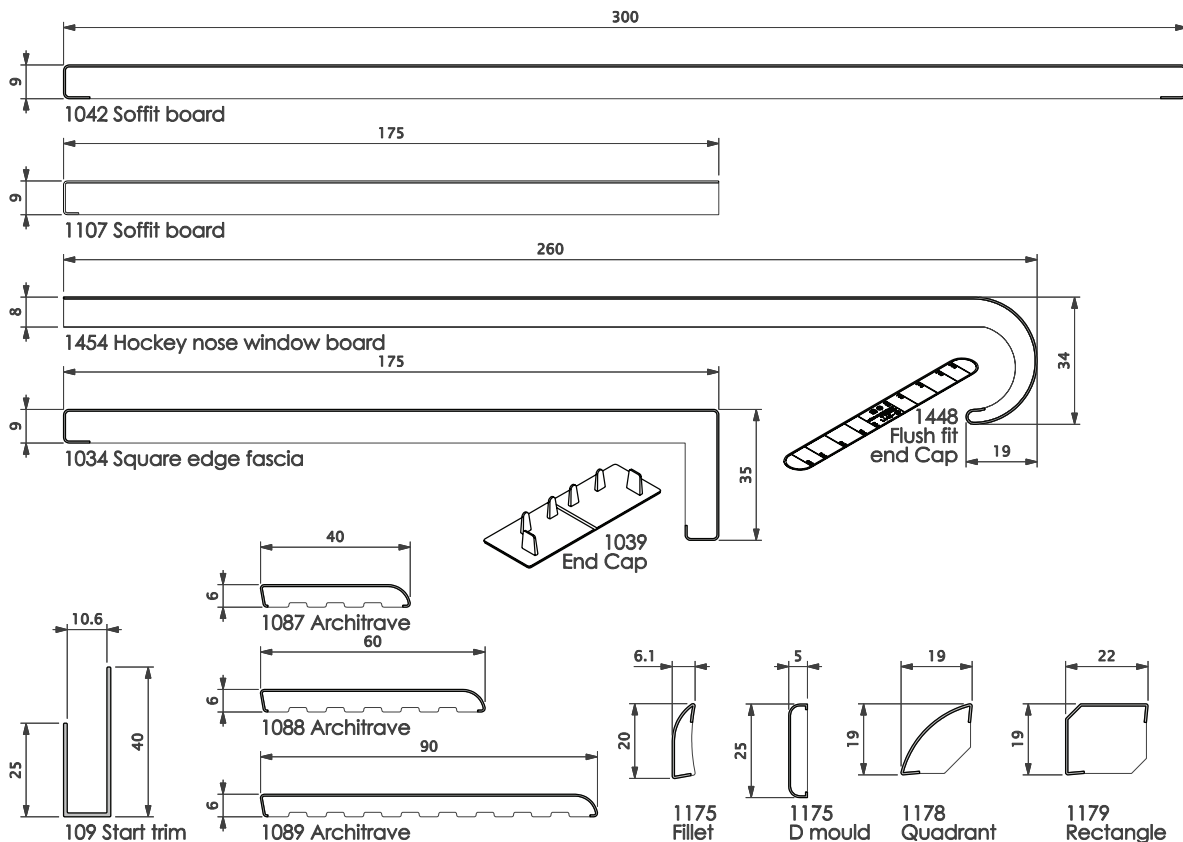

Note. Only DeepLas and Belface injection mouldings are available in white foil.